


# HUME CITY COUNCIL POWER-MATE Additional Instructions



## Enter your own electricity cost

All Hume City Council Power-Mates have been programmed with a default electricity cost of 25c/kWh. If you want to override the default electricity cost and program your own, follow these steps:

1. Check your electricity bill for your electricity cost (c/kWh).
2. Click the **Menu** button (a few times if needed) until you are in the Cost screen.
3. Hold the **Menu** button in the Cost screen until the Set Cost screen appears.
4. Click the **Zoom** button to change the flashing number to override the default electricity cost. Click the **Run** button to select the next digit.
5. Once you are finished updating the costs, click the **Menu** button to exit and return to the **Menu** screens.
6. **Please re-program the Power-Mate with the default electricity cost of 25c/kWh after use.**

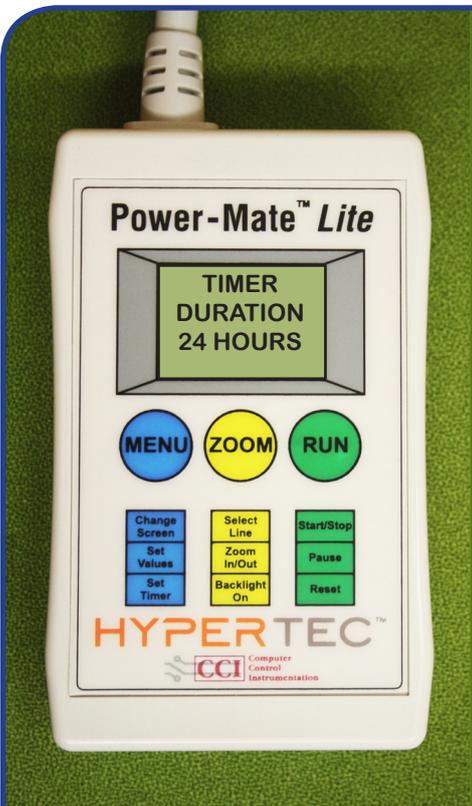

## Set an automated measurement time

For most appliances, a few seconds is enough time to get an accurate power use reading. However appliances that operate on temperature cycles - such as fridges and freezers - will need to be plugged into the Power Mate for at least 24 hours for an accurate reading. Appliances that use start up power - such as laptops and PCs, coffee machines, printers and phone/ faxes - should be measured after their start up routine.

To set an automated measurement time follow these steps:

1. Click the **Menu** button (a few times if needed) until you are in the Runtime/Endtime screen.
2. Hold the **Menu** button in the Runtime/ Endtime screen until the Timer Duration screen appears.
3. Click the **Zoom** button to select your desired run time.
4. Click the **Run** button to load the selected run time.
5. Click the **Menu** button to exit and return to the Menu screens.
6. You can skip this step or select 'Not Set'. In this case, you will need to manually stop the Power-Mate's measurement once you are finished by clicking the **Run** button.